

STEINBERG



# Fertigmontageset

Art.Nr.390 4222 3

## Installation

**1**

**2** S30 2 1


**3**

**4** Switch ON  
ON OFF  
 $<0 \rightarrow 5a1-a5$   
 $\rightarrow 5a14-15$   
 $>0 \rightarrow 5a6-15$

**5a1** Switch ON

**5a2** While holding the knurled part on the cap with one hand tighten the lock sleeve with a locking wrench by the other hand. Ensure that the cap remains still during this process.  
Cap  
Lock sleeve

## Technische Zeichnung

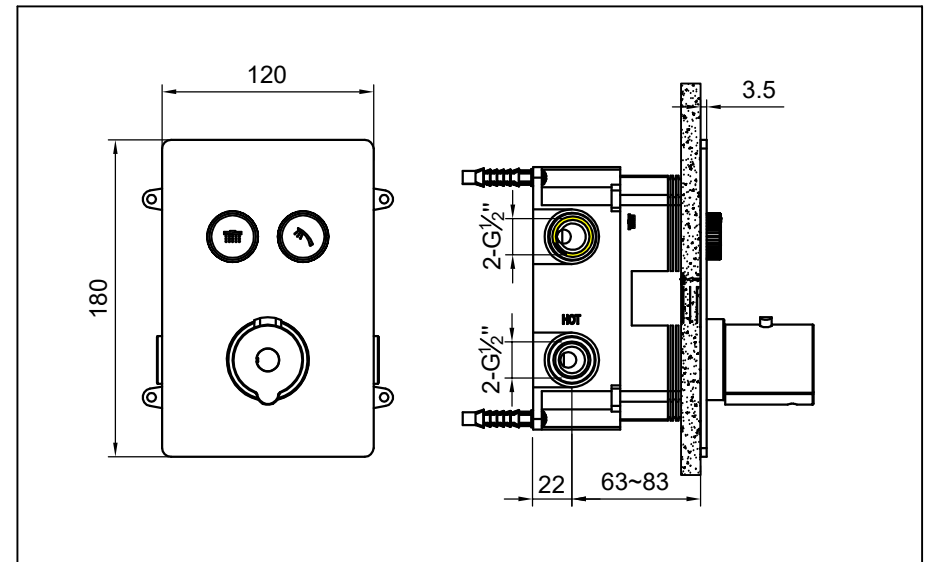

## Installation

**5a3**

**5a4** 3.5mm thickness plates  
9mm thickness plates  
11mm thickness plates

**5a5**

**5a6** 2 1  
3

STEINBERG



Fertigmontageset

Art.Nr.390 4222 3

Installation

<p>5a7</p> <p>1</p> <p>2</p> <p>Chamfer facing outside</p>	<p>5a8</p> <p>3.5mm thickness plates</p> <p>9mm thickness plates</p> <p>11mm thickness plates</p>
<p>5a9</p>	<p>5a10</p> <p>1</p> <p>2</p>
<p>5a11</p>	<p>5a12</p> <p>Switch ON</p> <p>=0 (✓)</p>

Installation

<p>5a13</p> <p>While holding the knurled part on the cap with one hand tighten the lock sleeve with a locking wrench by the other hand. Ensure that the cap remains still during this process.</p> <p>Cap</p> <p>Lock sleeve</p>	<p>5a14</p> <p>Gently install the connecting rod onto the adjusting rod until it reaches the end.</p>
<p>5a15</p> <p>1</p> <p><math>-3 &lt; X \leq 0</math></p> <p><math>X &gt; 0</math></p> <p>2</p> <p>3</p>	<p>6</p> <p>38°C</p>
<p>7</p> <p>11-13mm</p> <p>ON</p> <p>OFF</p>	<p>8</p> <p>Dash on cartridge</p> <p>Stop collar 38°C</p> <p>Thermostatic cartridge</p> <p>Dash on extended spindle</p> <p>Extended spindle</p> <p>Keep the following parts aligned vertically as shown in above picture: the 38°C mark on the face plate, the dash on cartridge, and the dash on extended spindle.</p>
<p>9</p>	<p>10</p> <p>High Low</p> <p>HOT</p> <p>COLD</p>

STEINBERG



Fertigmontageset

Art.Nr.390 4222 3

Explosionszeichnung

